



Hugh the Ducky's



Using a Heat Exchanger

"In-Floor Heating Made Simple"

Using a Heat Exchanger is Easy with the HUG Hydroponics System!


The Heat Exchanger is an easy way to interface between the HUG Hydroponics system and existing boilers, solar hot water, or wood boilers. Some plumbing skills may be required on the heater side.

For instructions on adding another heater source please see the [Hugh the Ducky's Guide to Multiple Heat Sources](#).




Your New Heat Exchanger

Heat Exchanger

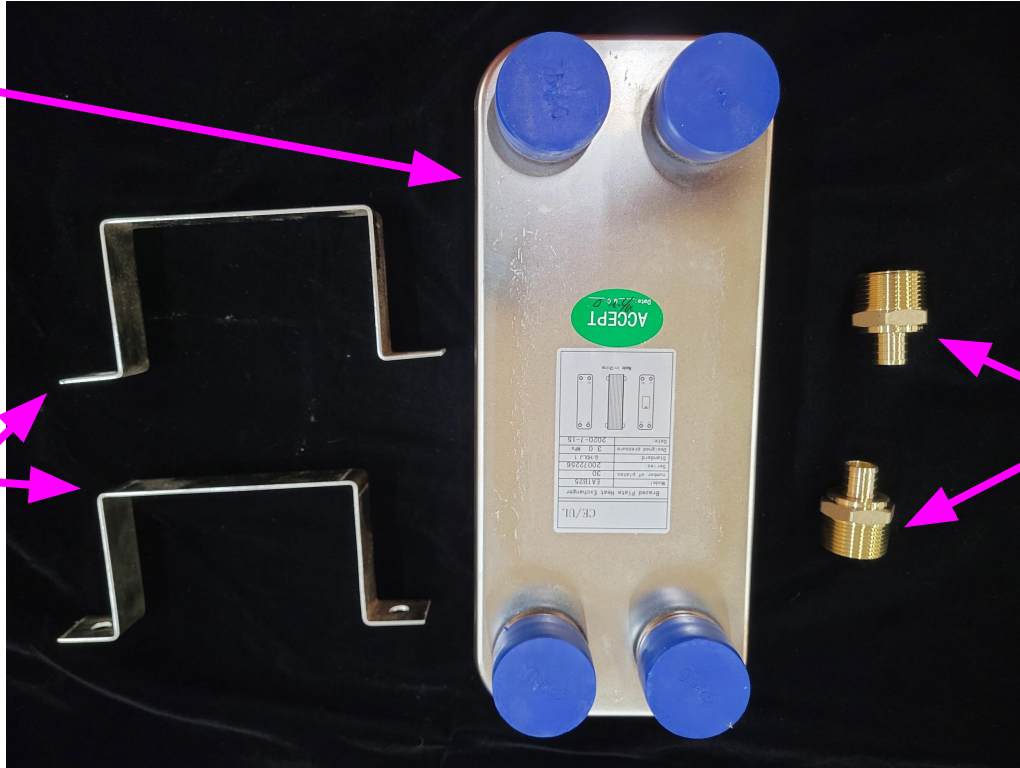



Mounting Brackets

Hose Adaptors

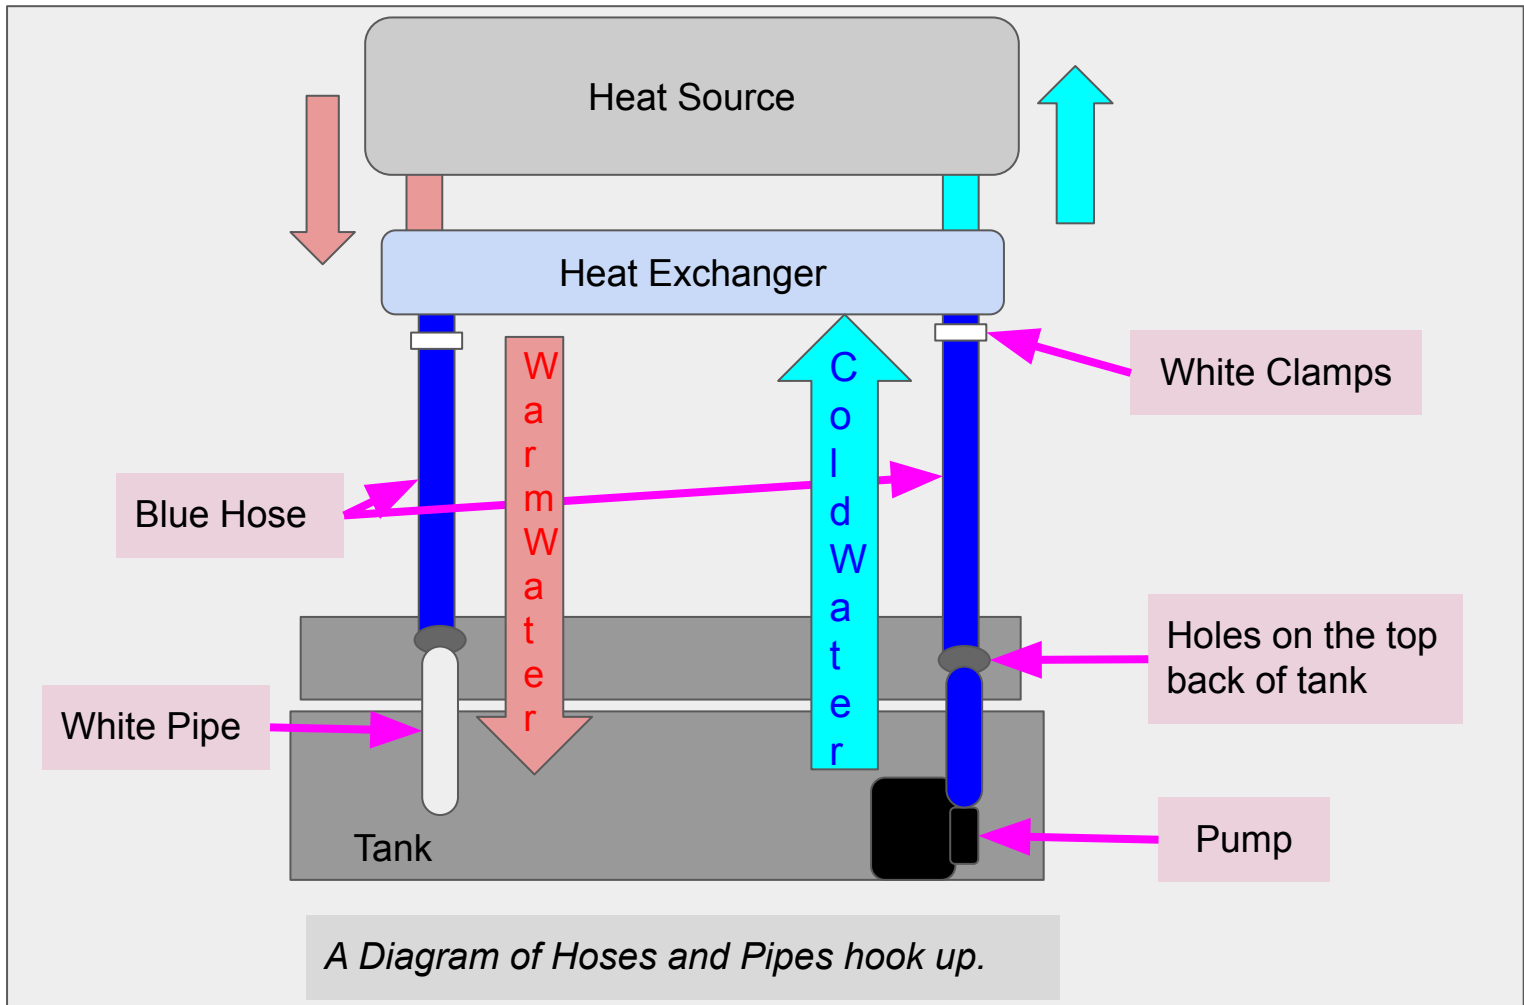

Attach Blue Hose to the Exchanger with the adaptor and clamp.

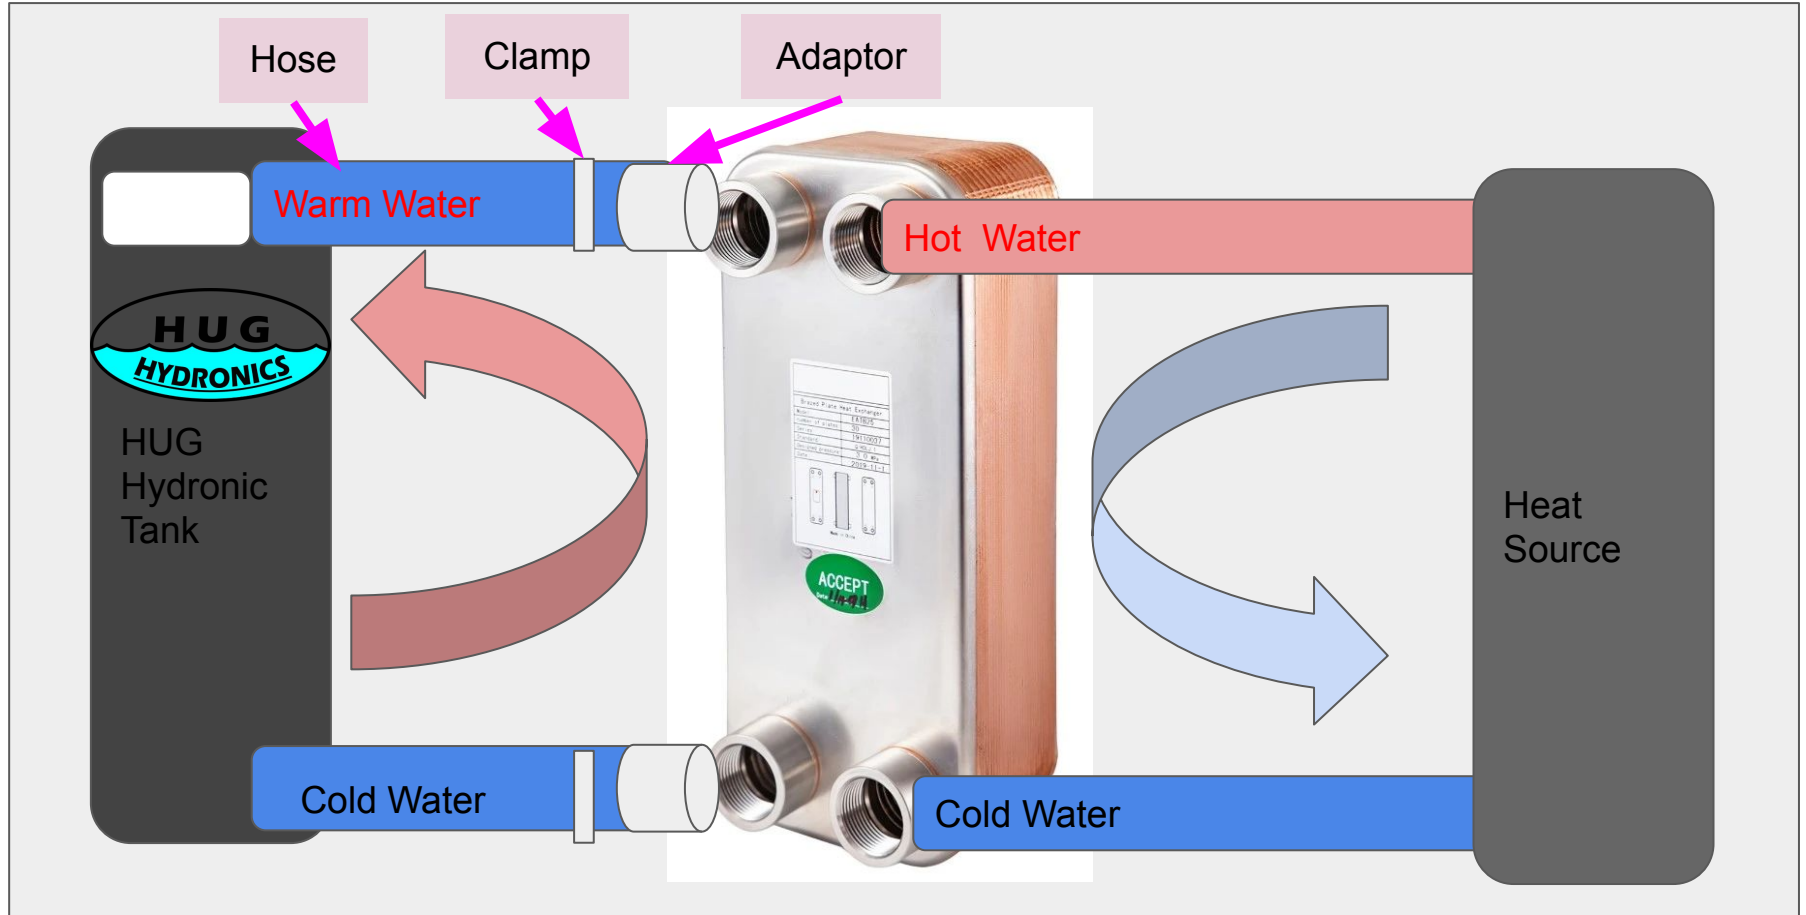

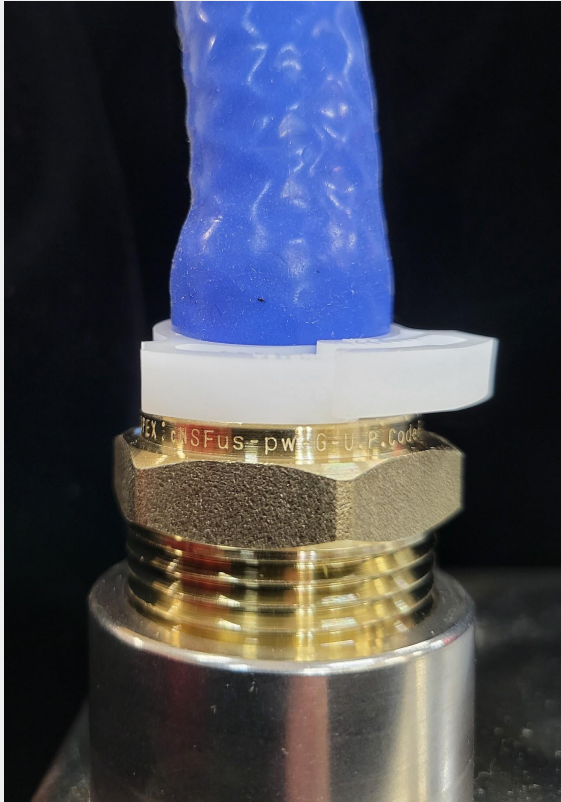

If the adaptor is not a perfect fit with the heat exchanger, then teflon tape will need to be used.

Teflon Tape may need to be used for a connection with the adaptor. Then push the blue hose on and secure with a clamp.

Feel free to attach to wall or other location with provided brackets.

Finish by following the rest of your instructions for [set up](#) or [Using Multiple Heat Sources](#).



Congratulations!
You're Just Ducky

Use brackets to attach the heat exchanger to a stable wall or other suitable object.



A PAIR OF FREE HOOP FOR YOUR EASY INSTALLATION



Hugh the Ducky Tech Line

*Your heating situation is probably as unique as you are. Feel free to call or email our **Hugh the Ducky Tech Line** for personal assistance.

HUGH@hughydronics.com- include pics of your set up/question please.

218-587-5001

